

	00LLLLL	010HHHH		11ee1eeee
FS0	1	40	C8	11001000
FS1	1	40	C9	11001001
FS2	1	40	CA
FS3	1	40	CB
FS4	1	40	CC
FS5	1	40	CD
FS6	1	40	CE
FS7	1	40	CF
FS8	1	40	D8
FS9	1	40	D9
FS10	1	40	DA
FS11	1	40	DB
FS12	1	40	DC
FS13	1	40	DD
FS14	1	40	DE
FS15	1	40	DF
FS16	1	40	E8
FS17	1	40	E9
FS18	1	40	EA
FS19	1	40	EB
FS20	1	40	EC
FS21	1	40	ED
FS22	1	40	EE
FS23	1	40	EF
FS24	1	40	F8
FS25	1	40	F9
FS26	1	40	FA
FS27	1	40	FB
FS28	1	40	FC
FS29	1	40	FD
FS30	1	40	FE	11111110
FS31	1	40	FF	11111111

Motor steuern

(Bisher nicht im DC-Car eingesetzt)

Stop	1	40	C0	11000000	
	1	40	C1	11000001	
Keine Änderung	1	40	C1	11000001	Befehl aufheben
Stark bremsen	1	40	C2	11000010	FS - 3
Bremsen	1	40	C3	11000011	FS - 1
Beschleunigen	1	40	C4	11000100	FS + 1
Stark beschleunigen	1	40	C5	11000101	FS + 3
Reserviert	1	40	C6	11000110	
Reserviert	1	40	C7	11000111	
Not AUS					
	(Im DC-Car eingesetzt)				
	11110000	11110000	0	0	Alle Autos anhalten